



2.5 Setting Dome Camera Protocol

If a dome camera is to be installed with a Fastrax keyboard controller, select F2 protocol.

Consult service personnel if a dome camera is installed with device other than a keyboard controller.

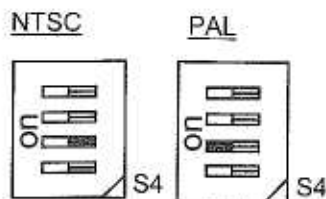

S/W	On	Off	FUNCTION
D1 S4-1	Enable	Disable	Alarm
D2 S4-2	PAL	NTSC	NTSC/PAL
D3 S4-3			Reserved
D4 S4-4	RS-422	RS-485	RS-422/RS-485

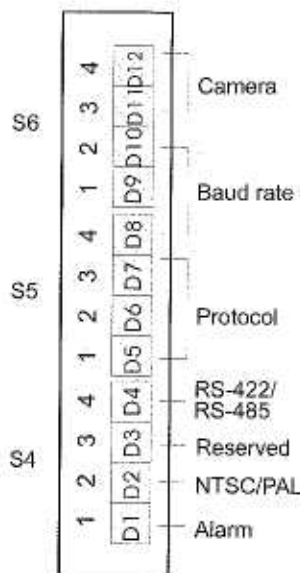

D5 S5-1	D6 S5-2	D7 S5-3	PROTOCOL
Off	Off	Off	F2, F2E, P, D, E & Ph Protocol (Default)
Off	Off	On	Reserved
Off	On	Off	S 422
Off	On	On	Reserved
On	Off	Off	V Protocol
On	Off	On	Reserved
On	On	Off	D Color
On	On	On	Reserved

D8 S5-4	D9 S6-1	D10 S6-2	BAUD RATE
Off	Off	Off	2400 bps
Off	Off	On	4800 bps
Off	On	Off	9600 bps (Default)
Off	On	On	19200 bps
On	Off	Off	38400 bps
On	Off	On	57600 bps
On	On	Off	115200 bps
On	On	On	230400 bps

D11 S6-3	D12 S6-4	CAMERA
Off	Off	Default cameras (Default)
Off	On	Reserved
On	Off	Reserved
On	On	Reserved

Figure 9 – Protocol Selection Switches